

EUROCARD HOLDER

SKP 32/D(A+C)

Screw terminals

32-pole D (EN 60603)

Row a, c

With the vertical snap adapter SASA 135 Art.-No. 63900 the holder can be mounted at right-angles on the rail.



The D2 size is for a card without a front plate.

Double row terminals on one side row for "a"

To insert the card first press down the 2 yellow buttons. Then slide the Eurocard into the guide slots pushing until fully engaged. The card is now locked into position. It can be removed by pressing down on the 2 yellow buttons.

[Link til produkt](#)

Illustrasjon

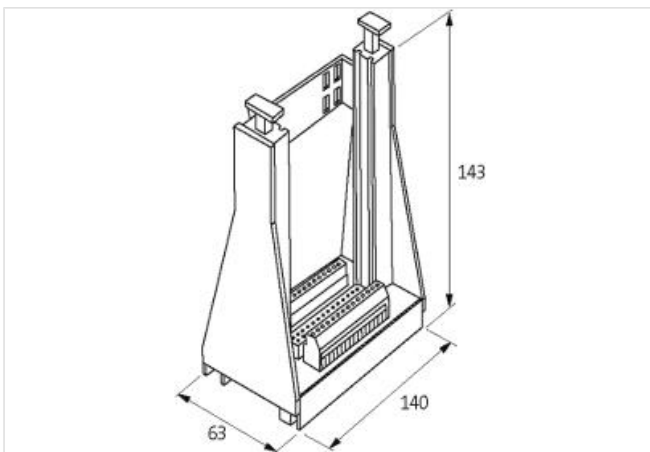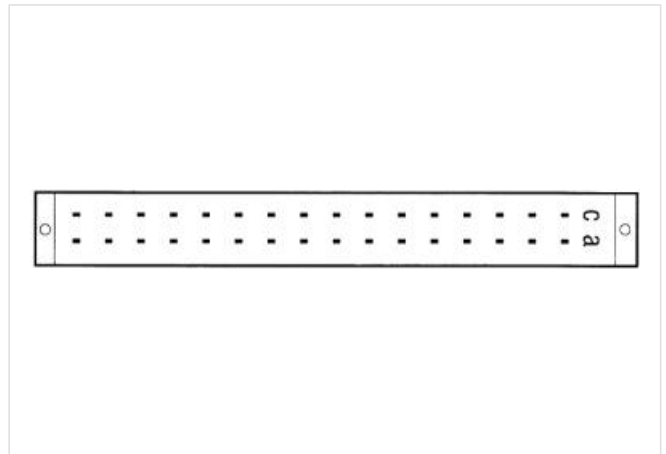

Produktet kan avvike fra bildet



Handelsinformasjon

ECLASS-6.0	27260710
ECLASS-6.1	27260704

ECLASS-7.0	27440402
ECLASS-8.0	27440402
ECLASS-9.0	27440402
ECLASS-10.1	27440402
ECLASS-11.1	27460201
ECLASS-12.0	27460201
ETIM-5.0	EC002780
GTIN	4048879040075
Pakkestørrelse	1
Tolltariffnummer	85366990
Electrical data Supply	
Operating voltage AC	250 V
Operating current max.	4 A
Installation	
Connection cross-section solid max.	4 mm ²
Installation Pin assignment	
No. of poles	32
Device protection Electrical	
Overvoltage category (EN 60664-1)	I
Device protection Media	
Flame resistance	flame retardant
Mechanical data	
Type of socket connector	D (EN 60603)
Mechanical data Material data	
Material housing	Plastic
Mechanical data Mounting data	
Mounting method	screwed, geschnappt
Suitable for mounting type	mounting rail, (EN 60715)
Height	137 mm
Width	63 mm
Depth	170 mm